



## Coil Retainer parts list

Item ID	Item Name	Quantity
4951300	JK Front Lower Spring Retainer Bracket Kit	
85	Nut 3/8"-16 Serrated	2
98	Bolt 3/8"-16 x 1"	2
951300	JK Front Lower Spring Retainer Bracket	2

Item ID	Item Name	Quantity
4951400	JK Rear Upper Spring Retainer Bracket Kit	
134	Washer 7/16" Flat	2
214	Nut 1/2"-13 Stover	2
238	Bolt 1/2"-13 x 1"	2
951400	JK Rear Upper Spring Retainer Bracket	2

## Front Instructions

1. Install the front coil retainer by inserting it in between the coil spring using a pry bar.



2. Mark the coil perch where you will need to drill.



3. Drill the hole using a 3/8" drill bit.



4. Reinstall the coil retainer, using the supplied hardware install the bolt and nut using a 9/16 socket and wrench. Torque to 20 Ft-lbs.



## Rear Installation

5. Locate the factory hole at the frame side coil bucket.



6. Using the supplied hardware, install the coil retainer in between the top to coils. Using a 3/4 socket and wrench torque the bolt to 50 Ft-lbs

